

Xc16Z/Xc19Z Series Cash Drawer

Quickstart Guide

V2.0




Installation

If you have purchased mounting brackets for your cash drawer, refer to the instructions included with the mounting brackets for proper installation procedures.


Connection to Receipt Printer

The cash drawer cable comes with a sticker on one of the ends. Plug this end into the printer. This sticker also tells you which printer emulation it is for. To determine which cable your printer requires please refer to pos-x.com.

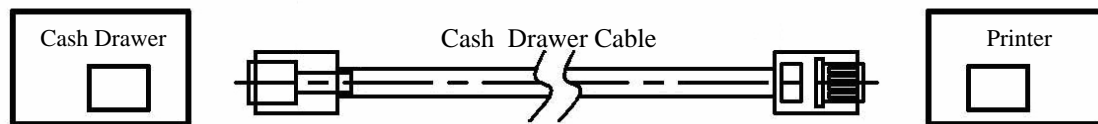


Lock Positions

The key lock is a 4 position lock: The left position is the manual open which means turning the key to this position will open the drawer. The middle is the Electronically on line position which means the drawer is controlled by the printer. The right position is locked open,/locked closed. Locked open means the drawer can't be closed without a key. Locked closed means the drawer can't be opened with out a key.

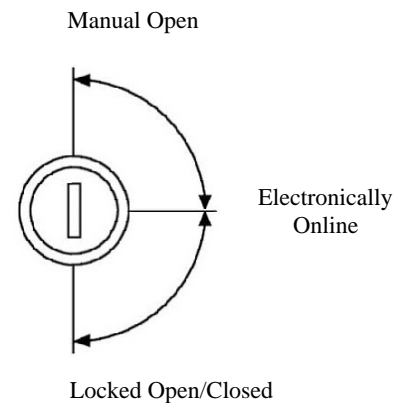

Drawer Removal

Open the cash drawer and remove the plastic coin and bill tray. Pull the drawer out until it stops, tip the front edge of the drawer up and pull the drawer out at an inclined angle.

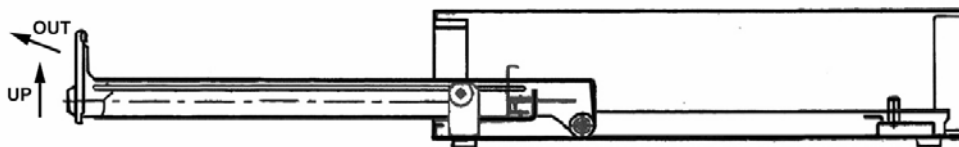

Warning: Do not use the till edge of the cash drawer to break open coin rolls as this may damage the cash drawer.

Maintenance

The cash drawer slides should be periodically cleaned and lubricated. Frequency is dependent on use and the environment, but typical recommended frequency is every three months. Using a dry, lint free cloth, wipe out the old grease and debris from the inner and outer slides. Do not use water or any type of liquid cleaner. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer slides. Cycle the slides several times to properly coat the Polyurethane rollers and to spread the grease evenly.

Parts and Accessories

For a list of parts and accessories please contact your local POS-X reseller. For a list of local resellers, please visit www.pos-x.com or call 800.790.8657.



3-Year Limited Warranty

POS-X Inc. provides this limited (3)-Year Warranty for this product.
For terms and conditions please go to: WWW.POS-X.COM

POS-X Technical Support
1-360-738-8433 support@pos-x.com